


## How to proceed for CPLD and CPU programming

First download and unzip in a folder the OEM tool package "OEMTool110a.zip"

Then **plug the USB cable**

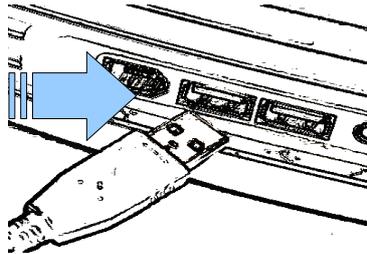


if windows requires a driver please choose the inf file **atm6124\_cdc.inf** contained in the OEM tool package.


**run ConfigTool.exe**

Now you are able to program the CPLD step by step


- 1) Press the button **Flash CPLD**
- 2) When **DONE UNPLUG** the USB Cable

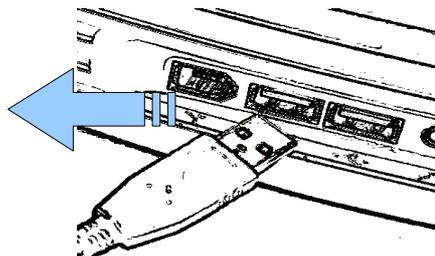

Then **RE-PLUG USB Cable**

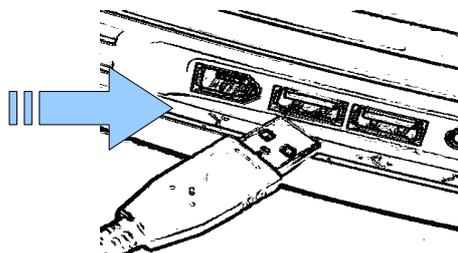


**WAIT 3 seconds then unplug it**

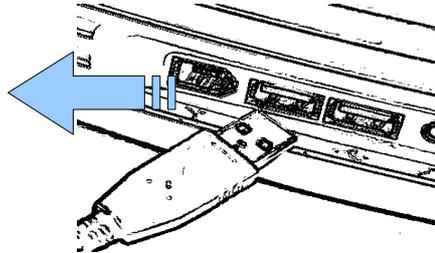

**CPLD PROGRAMMED**


**Now Proceed with CPU PROGRAMMING**

**1) Plug the USB CABLE**

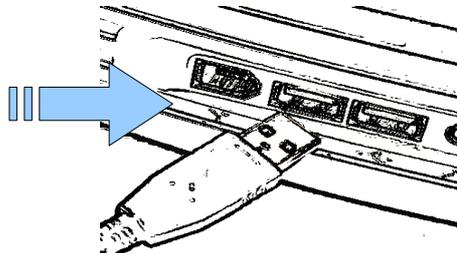

**Press the Button FLASH CPU**

**When DONE unplug the USB Cable**

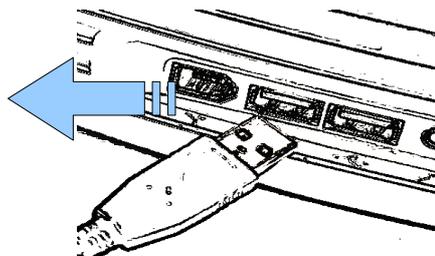

**CPU PROGRAMMED**